



# ATL Berkshire POE Module Quick Start Guide

Thank you for purchasing your ATL Berkshire POE Module. This module enables the Berkshire 5000 IP telephone to operate on an Ethernet network without the need for local mains power. Before you start you need to ensure that your network supports “Power Over Ethernet”.

## **BERKSHIRE IP TELEPHONES**

Your Berkshire POE Module is supplied for use only with the Berkshire 5000 IP telephone. It is important to note that its use to power other IP telephones or other equipment of any kind will void the guarantee, may result in damage to your Berkshire POE Module and presents a potential safety hazard.

## **CONNECTING YOUR BERKSHIRE POE MODULE**

To convert a Berkshire 5000 IP telephone from operating with a PSU to operating with POE please complete the following steps:-

1. Unplug all the existing cables from the Berkshire IP telephone
2. Unplug the PSU from the mains socket and remove it
3. Unclip the Desk Bracket from the underside of the Berkshire IP telephone
4. Clip the Berkshire POE Module to the underside of the Berkshire IP telephone
5. Plug the 6 Vdc power jack of the Berkshire POE Module into the socket on the Berkshire IP telephone labelled “DC6V”
6. Plug the RJ45 ethernet plug of the Berkshire POE Module into the socket on the Berkshire IP telephone labelled “LAN”
7. Plug the LAN cable that is connected to the network into the port marked “LAN” on the Berkshire POE Module
8. Ensure that the network port to which the Berkshire POE Module is connected supports “Power Over Ethernet” and that it is enabled.

## **GUARANTEE**

Your Berkshire POE Module is designed and manufactured to exacting quality standards. This enables ATL Telecom Limited to offer a 2 year guarantee from the date of purchase. This guarantee protects against faulty material or workmanship, and applies to the UK only and is not transferable.

The terms and conditions under which the guarantee will be valid are as set out below.

Misuse or any modification carried out to the POE module, or operation other than in accordance with the instructions supplied, will invalidate the guarantee.

Damage arising from incorrect installation, accidental damage or consequential loss, are not covered under the guarantee.

In the event of a fault developing during the period of the guarantee, the POE module should be returned to your supplier, adequately and safely packed, together with the proof of purchase.

The liability of ATL Telecom Limited will be limited to the cost of repair or complete replacement of the same defective module, at the discretion of the company. In the event that the same item is not available, a suitable alternative will be offered.

The terms of this agreement do not affect your statutory rights.

## **MANUFACTURERS DECLARATION\***

ATL Telecom Limited declares that this product is in conformity with the essential requirements of the R & TTE directive 1999/5/EC.

\*A copy of the Declaration of Conformity is available, upon request, from ATL Telecom Limited.

### **TECHNICAL SUPPORT**

- Telephone: +44 (0) 29 2050 0799
- Email: support@atltelecom.com

ATL Telecom Limited,  
Fountain Lane,  
St Mellons,  
Cardiff. CF3 0FB

[www.atltelecom.com](http://www.atltelecom.com)

1/427/001/611 - Issue 2



Sept 2006