
Doro PhoneEasy® 614

English






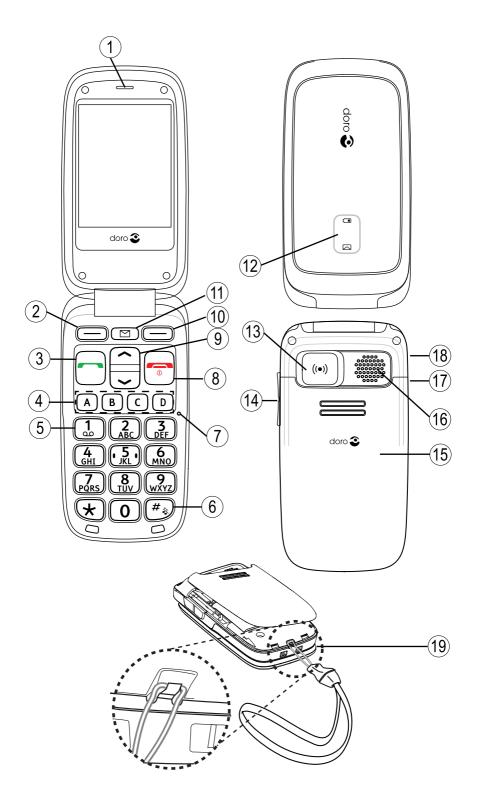

- 1. Earpiece
- 2. Left soft key
- 3. Call key
- 4. Speed dial
- 5. 1 / Voice mail
- 6. # / Silent / Input method
- 7. Microphone
- 8. End call/Power on/off
- 9. Arrow keys
- 10. Right soft key
- 11. SMS shortcut

- 12. LED light (Red=Battery level low / charging, Green=New message / Missed call)
- 13. Emergency key
- 14. Volume control
- 15. Battery cover
- 16. Loudspeaker
- 17. Headset socket
- 18. Charging socket
- 19. Lanyard
- 20. Charging stand

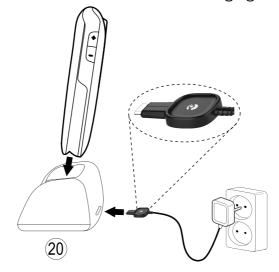

Contents

Installation	. 1
Installing the SIM card, memory card and the battery	. 1
Charging	
Symbols	3
Assistive functions	
Phone indicators	
Display status symbols	
Display main symbols	
Operation	
Activating the phone	
Making a call	
Making a call from the phonebook	
Receiving a call	
Volume control	6
Volume control Entering text 🕏	. 7
Call options	. 8
Call waiting	. 9
Call information	. 9
Speed dial 🖺	. 9
Silent	. 9
Headset	
SOS calls	
Emergency key 🛖	
Phonebook	
Creating a phonebook entry	.12
ICE entry (In Case of Emergency) +	.12
Managing phonebook entries	.12
ICE (In Case of Emergency) +	14
Messages	.15
Creating and sending SMS	.15
Creating and sending voice message	
Creating and sending MMS	16
Inbox, Sent, Outbox	.17
Call log	.19
Retrieving and dialling	
Image viewer	


Image viewer, options	20
Settings	21
General	
Sound 🖁	
Display	
Calls	
Messages	33
Emergency 🕂	
Connectivity	38
Security	
File manager	43
Additional functions	45
Alarm	45
Calendar	45
Calculator	46
FM radio	
Instructions for the REMOTE USER	48
Troubleshooting	52
Safety instructions	54
Network services and costs	
Operating environment	
Medical units	
Areas with explosion risk	
Emergency calls	55
Vehicles	55
Care and maintenance	56
Warranty	57
Specifications	
Hearing aids	
Specific Absorption Rate (SAR)	
Declaration of Conformity	

Installation

IMPORTANT!

Turn off the phone and disconnect the charger before removing the battery cover.

Installing the SIM card, memory card and the battery The SIM and memory card holder's are located inside the battery compartment.

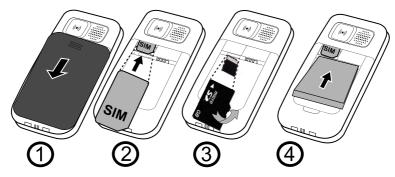

- 1. Remove the battery cover and the battery if it is already installed.
- 2. Insert the SIM card by gently sliding it into the holder. Make sure that the SIM card's contacts are facing inwards and that the cut off corner is pointing downwards. Take care not to scratch or bend the contacts on the SIM card.
- 3. Optional: Insert the memory card into the slot under the SIM card holder. Make sure that the memory card contacts are facing upwards and push the card in, until you hear a click. Take care not to scratch or bend the contacts on the card.

 To remove or replace the card, push the card in until you hear a click and then pull the card out.
- 4. Insert the battery by sliding it into the battery compartment with the contacts facing upwards to the right. Replace the battery cover.

IMPORTANT!

Use only compatible memory cards for use with this device. Compatible card type: **microSD, microSDHC**.

Incompatible cards may damage the card and the device and corrupt data stored on the card.

Memory cards are sold separately.

Charging



CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low, is displayed and a warning signal is heard. To charge the battery, connect the mains adapter to a wall socket and to the charging socket —.

is displayed briefly when the charger is connected to the phone, and when it is disconnected. The battery charge indicator will be animated while charging. It takes approximately 3 hours to fully charge the battery.

is displayed on the screen when charging is completed. If the phone is turned off when the charger is connected to the phone only the battery charge indicator will be shown on the display.

Note!

To save power the LCD backlight goes off after a while. Press any key to illuminate the display. Full battery capacity will not be reached until the battery has been charged 3–4 times. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use.

Save energy

When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet.

Symbols

Assistive functions

The following symbols indicate information in the manual about assistive functions for:

③	Seeing	Wall State of the	Handling
8	Hearing	+	Safety

Phone indicators

LED light on the phone will:

- flash green when you have a new message or a missed call. After reading the new message/missed call, the flashing will stop.
- flash red when the battery is running low and during charging.

Display status symbols

	Network signal strength strong. The higher the bar, the stronger the signal.	*	Network signal strength insufficient, no network
Ð	Ring only		3G coverage
1	Ring + vibration	\bowtie	Unread message in Inbox
<i>\(\text{\tint{\text{\tint{\text{\tin}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tex{\tex</i>	Vibration only	(%)	Bluetooth on, visible to others
M	Silent		Bluetooth on, invisible to others
Ŕ	Roaming (in other network)	€	Bluetooth connected
68	Missed call.	\Diamond	Alarm active
\$	Call forward activated	ij	Battery level
•••	Voice mail message received	6	Headset connected

Display main symbols

	•		
	Insert SIM	-===	Charger connect
	SIM card damaged or not valid		Charger removed
	Mute		Headset in
	Message sending success		Headset out
×	Message sending failed		Speaker on
×	Error	Ž	Speaker off
•	Warning	Ď	Incoming call
?	Query	Û	Outgoing call
	Done (confirmed)		Call ended
	New message	C!	Missed call. Press Read to see the missed calls.
	Battery level low	C	Call on-hold
**	Searching	sos	SOS calls only
	Emergency call	X	Processing, please wait
	vCard message		Volume control

Operation

Activating the phone

Press and hold the red button on the phone to turn it on/off. Confirm with **Yes** to power off.

The following messages may be displayed:

SIM card missing or incorrectly inserted.
SIM card damaged or not valid.

If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN:** is displayed. Enter the PIN code and press **OK** (left soft key¹ \bigcirc). Delete with **Clear** (right soft key).

Note!

If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

- 1. Enter the PUK code and confirm with **OK**.
- 2. Enter a new PIN code and confirm with **OK**.
- 3. Re-enter new PIN code and confirm with **OK**.

Standby (idle mode)

When the phone is ready to use, and you have not keyed in any characters, the phone is in standby.

Left soft key in standby is Menu.

Right soft key in standby is **Name**.

Tip:

You can always press return to standby.

^{1.} Soft keys have multiple functions. The current key function is shown above the soft key on the display.

Changing the language, time and date

The default language is determined by the SIM card. See Settings/General, p.21 on how to change language, time and date.

Making a call

- 1. Enter the phone number including the area code. Delete with **Clear**.
- 2. Press rest to dial. Press **Abort** to cancel dialling.
- 3. Press remarks to end the call.

Tip:

For international calls, always use + before the country code for best operation. Press * twice for the international prefix +.

Making a call from the phonebook

- 1. Press **Name** to open the phonebook.
- 2. Use the arrow keys \(\shi' / \shi \) to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the entry, see *Entering text* \(\hat{\shi}, \ p. 7 \).
- 3. Press **Call** to dial the selected entry, or press **Back** to return to standby mode.

Receiving a call

To answer an incoming call when the flip is closed, open the flip.

To answer an incoming call when you have set **Open to answer** to **Off** (see *Settings/Calls/Answer mode, p.31*):

- 1. Open the flip and press to answer, or press **Silent** to switch off the ring signal and then **Reject** to reject the call (busy signal). Alternatively, press to reject the call directly.
- 2. Press remark to end the call.

Tip:

Press and hold + or - to temporary switch off the ring signal without opening the flip.

Volume control

Use the side keys +/- to adjust the sound volume during a call. The volume level is indicated on the display. If you use hearing aid or have

hearing difficulties when using the telephone in noisy environment, you can customize the phone's audio settings, see *Settings/Sound* $\mathbb{Q}/Audio\ setup\ \mathbb{Q}$, p.25.

Entering text

Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.

Press ** for a list of special characters. Select desired character with and press **OK** to enter it.

Use the side keys +/- or \checkmark/\sim to move the cursor within the text.

Press # to cycle upper case, lower case and numerals.

Entering text with predictive text

In some languages you can use the Smart ABC (eZiTypeTM) input method which uses a dictionary to suggest words. See *Settings/Messages/Predictive text* \approx , *p.33* on how to activate predictive text.

Press each key **once**, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed.

- 1. To write the word "Fred", press 3, 7, 3, 3. Complete the word before looking at the suggestions.
- 2. Use \(\sum / \sim \) to view the suggested words.
- 3. Press **Select** and continue with the next word. Alternatively, press **0** to continue with the next word.

Entering text manually

If none of the suggested words are correct, press # to change to manual input mode. The icon on the top left of the display indicates the input mode:

☑ Abc	Sentence case with predictive text
☑ ABC	UPPER CASE with predictive text
☑ abc	lower case with predictive text
Abc	Sentence case
ABC	UPPER CASE
abc	lower case

Numerals

Note!

123

Selected menu language determines available input methods.

Call options

Options (left soft key)

A menu with the following options is displayed:

Hold single call/Retrieve single	Hold/retrieve the current call.
End single call	End the current call (same as).
End all calls	End all connected calls.
New call	Call another number (Conference).
Phonebook	Search the phonebook.
Messages	Write or read messages.
Mute	Disable the microphone.

SPK on (right soft key)



CAUTION

Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

Activates handsfree mode, which allows you to speak without holding the phone. Speak clearly into the microphone at a maximum distance of 1 m. Use the side keys +/- to adjust the loudspeaker volume. Press **SPK off** to return to normal mode.

Note!

The handsfree function allows only one person at a time to talk. Switching between talk/listen is triggered by the sound of the person talking. Loud noises (music, etc.) in the background may interfere.

Call waiting

An alert tone will be heard if there is an incoming call while talking. To put the current call on hold and answer the incoming call, press **Options**, select **Answer** and then **OK**.

Tip:

Call waiting must be activated, see Settings/Calls/Call setup, p.31.

Call information

During a call, the outgoing or incoming phone number and the elapsed call time is displayed. If the identity of the caller is withheld, **Unknown** is displayed.

Speed dial 🐒

A, B, C, D and the numerical keys 0 and 2–9 can be used for speed dialling. To speed dial an entry from standby, press and hold the corresponding key. See also Settings/Calls/Speed dial, p.29.

Silent

Silent is a fixed profile with Keypad tone, Message tone and Ring tone disabled, while Vibration, Events and Alarm are unchanged.

Tip:

Press and hold shortcut key # to activate/deactivate Silent.

Headset

When a headset is connected, the internal microphone in the phone is automatically disconnected.

When receiving a call you can use the answer key on the headset cable (if it has one) to answer and end calls.



CAUTION

Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset.

SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by _____.

Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

Emergency key +



CAUTION

When an emergency call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

The Emergency key allows you easy access to contact predetermined numbers should you need help.

To make an emergency call, press and hold the Emergency key on the back of the phone for 3 seconds, or press it two times within 1 second. The phone will send a text message to all phone numbers in the numbers list. The phone will then dial the first number on the list. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until is pressed.

The Emergency function must be activated before use. See *Settings/Emergency* **_**, *p.36* on how to activate the function as described above or with 3 key presses, how to enter contacts in numbers list, and how to edit the text message.

The Emergency function can also be configured so that the receiver of the call must press "O" (zero) to confirm the emergency call, in order to stop the alarm sequence.

If there is a risk that the emergency call will be answered by a voice mail/answering service, please activate the function Confirm with "O". See *Settings/Emergency* +, p.36.

Note!

Automatic calls to emergency numbers (e.g. 112, 999, 911 or other official emergency numbers) are normally not allowed. Do not save emergency numbers in the list of numbers to be called automatically. Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number.

IMPORTANT!

Information to the $\underline{\text{receiver}}$ of an Emergency call, when Confirm with "0" is activated:

- After receiving the emergency message, each number in the Numbers list will be called sequentially.
- To confirm the emergency call, the <u>receiver</u> need to press 0.
- If the <u>receiver</u> doesn't press **o** within 60 seconds the call will be disconnected and the next number in sequence will be called.
- If the <u>receiver</u> press **0** within 60 seconds, the call is confirmed and no further call attempts will be made (emergency sequence interrupted).

Phonebook

The Phonebook can store 300 entries with 3 phone numbers in each entry.

Creating a phonebook entry

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select -New contact- and press Add.
- 3. Enter a Name for the contact, see Entering text , p. 7. Delete with Clear.
- 4. Use \(\sigma / \sigma \) to select \(\bar{\text{Mobile}} \) Mobile, \(\bar{\text{Home}} \) Home or \(\bar{\text{III}} \) Office, and enter the phone number(s) including the area code.
- 5. Select Picture and press **Edit** to associate a picture to the contact.

This picture will be displayed when the corresponding contact is calling you and may also be visible in the phonebook, see *Settings/General/Phonebook picture*, *p.25*.

- Select My pictures and press OK to select an existing picture.
- 6. Press Save.

Tip:

For international calls, always use + before the country code for best operation. Press * twice for the international prefix +.

ICE entry (In Case of Emergency) +

With this additional information and medical information, first responders can access this information from the victim's phone in case of emergency. In the event of a trauma, it is critical to have this information as early as possible which can increase the chances of survival. All fields are optional, but the more information provided the better. See ICE (In Case of Emergency) \clubsuit , p.14 on how to configure your ICE information.

Managing phonebook entries

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select a contact and press Options.
- 3. Select one of the following options and press **OK**:

View

Show details for the selected contact.

Edit

- 1. Use side keys +/- and \(\simegrightarrow\)/\to move the cursor. Delete with Clear.
- 2. Press Save.

Add

See Creating a phonebook entry, p.12.

Send SMS

Press **OK** to write a SMS message, see *Creating and sending SMS*, p.15.

Call

Press **OK** to call the contact.

Delete

Press **OK** to delete the selected phonebook entry. Press **Yes** to confirm or **No** to abort.

Delete all

Select **From SIM** or **From phone** and press **OK** to delete all phonebook entries from the SIM card or phone memory.

Enter the phone code and press **OK** to confirm. The default phone code is **1234**.

Copy all

Select **From SIM** and press **OK** to copy all phonebook entries from the SIM card to the phone memory. Press **Yes** to confirm or **No** to abort.

Select **From phone** and press **OK** to copy all phonebook entries from the phone memory to the SIM card. Press **Yes** to confirm or **No** to abort.

Send vCard

Select **Send by SMS** and press **OK** to send the selected phonebook entry as a vCard via SMS. Enter the phone number of the recipient.

Alternatively use the arrow keys \sim / \sim to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the entry, see *Entering text* \approx , p. 7. Press **OK** to send.

Select **Via Bluetooth** and press **OK** to send the selected phonebook entry as a vCard via Bluetooth*. See *Settings/Bluetooth*, *p.38* on how to connect.

ICE (In Case of Emergency) ⊕

First responders can access additional information such as medical information from the victim's phone in case of emergency. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select ♣ICE and press **OK**, then use **✓**/**✓** to scroll the list of entries.
- 3. Press **Edit** to add or edit information in each entry, see *Entering* text , p. 7. Delete with **Clear**. Press **Save** when done.

Name:	Your own name.
Birth:	Your date of birth.
Height:	Your height.
Weight:	Your weight.
Language:	Your language.
Insurance:	Your insurance provider and policy number.
Contact 1: Contact 2: Doctor:	Press Options and then OK to Add or Delete a contact from the phonebook, or Save to accept the current entry. If possible, add your relationship to your ICE contacts in the phonebook, such as "ICE Wife Mary Smith".
Condition:	Any medical conditions/medical devices (e.g. diabetic, pacemaker).
Allergies:	Any known allergies (e.g. penicillin, bee stings).
Blood type:	Your blood type.
Vaccination:	Any relevant vaccination.

Medication:	Any medication that you are treated with.		
	Other information (e.g. organ donor, living will, consent to treat).		

Messages

Creating and sending SMS

Note!

Before you can send any SMS, you need to save your message centre number. The number to your service centre is supplied by your service provider and is usually set on the SIM card. If not, you can enter the number yourself. See Settings/Messages, p.33.

- Press shortcut key
 or press Menu, scroll to and press OK.
- 2. Select **SMS** and press **OK**.
- 3. Type your message, see *Entering text* \$\operation\$, p. 7, then press **To**.
- 4. Select an already added recipient from **Phonebook** and press **Add**. Alternatively, select **Enter recipient** and press **Select** to add recipient manually and press **Done**.
- 5. Select **Add** to add more recipient or select **Send** to send and then press **OK**.
- 6. You can also modify the recipients by selecting one and press **Options** to **Edit**, **Delete** or **Delete all**.

Note!

If you choose to add multiple recipients, you will be charged for each recipient (maximum 10).

For international calls, always use + before the country code for best operation. Press * twice for the international prefix +.

Creating and sending voice message

A voice message use the same technology as a MMS. Both you and the recipient must have subscriptions that support MMS. The settings for MMS is supplied by your service provider and can be sent to you automatically via SMS. If not, see *Settings/Messages/MMS*, *p.34* on how to set your MMS profile.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Voice message and press OK.

- 3. Recording will start immediately. Press **Stop** when done and press **Yes** to save.
- 4. Select an already added recipient from **Phonebook** and press **Add**. Alternatively, select **Enter recipient** and press **Select** to add recipient manually and press **Done**.
- 5. Select **Add** to add more recipient or select **Send** to send and then press **OK**.
- 6. You can also modify the recipients by selecting one and press **Options** to **Edit**, **Delete** or **Delete all**.

Note!

If you choose to add multiple recipients, you will be charged for each recipient (maximum 10).

For international calls, always use + before the country code for best operation. Press * twice for the international prefix +.

Creating and sending MMS

A MMS message can contain text and media objects such as pictures, sound recordings and video. Both you and the recipient must have subscriptions that support MMS. The settings for MMS is supplied by your service provider and can be sent to you automatically via SMS. If not, see *Settingsl Messagesl MMS*, p.34 on how to set your MMS profile.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select MMS and press OK.
- 3. Type your message, see *Entering text* , *p. 7*, then press **Options**.
- 4. Add items to your message from the options **Add subject**, **Add picture**, **Add sound** and **Add video**.
- 5. Add recipients with **To** and **Send** when ready.

Add subject

- Select Add subject and press OK.
- 2. Type your subject, see *Entering text* , p. 7, then press **Done**.

Add picture

- 1. Select **Add picture** and press **OK**.
- 2. Select My pictures and press OK.

- 3. Select Phone/Memory card and press Open.
- 4. Select a folder, eg **Photos** and press **Open**.
- 5. Select a file and press **OK**.

Add sound

- 1. Select **Add sound** and press **OK**.
- Select My sounds and press OK.
 Alternatively, select Record sound and press OK for using the microphone to record sound. Recording will start immediately. Press Stop when done and press Yes to save.
- 3. Select Phone/Memory card and press Open.
- 4. Select a folder, eg Audio and press Open.
- 5. Select a file and press **OK**.

Add video

- 1. Select **Add video** and press **OK**.
- 2. Select My videos and press OK.
- 3. Select **Phone/Memory card** and press **Open**.
- 4. Select a folder, eg **Received** and press **Open**.
- 5. Select a file and press **OK**.

Add recipients (To)

- Select To and press OK to select recipient from Phonebook and press Add.
 - Alternatively, select **Enter recipient** and press **Select** to add recipient manually and press **Done**.
- 2. Select **Add** to add more recipient or select **Send** to send and then press **OK**.
- 3. You can also modify the recipients by selecting one and press **Options** to **Edit**, **Delete** or **Delete all**.

Inbox, Sent, Outbox

Incoming SMS and MMS use shared inbox.

M SMS/MMS unread F / M SMS/MMS read

Outgoing SMS and MMS use shared folder for sent messages.

/ SMS/MMS sent

Unsent SMS and MMS use shared outbox

/ MS/MMS unsent

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Inbox/Sent/Outbox and press OK.
- 3. Select a message and press **Read**. Use \(\sime\)/\(\sime\) to scroll the message up/down.
- 4. Press **Options** fot the following options:

View (MMS only)

To view the message.

Call

Press **OK** to call the contact.

Resend

Send again to the same receiver.

Reply

Type your reply, then press **Done**. The message will be sent immediately.

Delete

Press Yes to delete the message, or No to return.

Edit

Edit the message, then press **Send**.

Forward

Forward a message. Edit the message (if desired), then press Send.

Use number

Displays all phone numbers contained in the message as well as the sender's number.

Call	Call the selected number.
Save	Save the number in the Phonebook.

Send SMS	Write a new SMS message.
Send MMS	Write a new MMS message.

Save objects (MMS only)

To save text and media objects such as pictures, sound recordings and video.

Details (MMS only)

To view details of the message.

Call log

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

Retrieving and dialling

- 1. Press —.
 - Alternatively, press **Menu**, scroll to **\subseteq** and press **OK**.
- 2. Use \(\square\) to scroll through the **Call log**.
 - \Diamond

Received call



Dialled call



Missed call

3. Press to dial the number or press **Options** for the following settings:

View	Show details for the selected call.
Delete	Delete the call.
Delete all	Delete all calls in the Call log.
Save	Save the number in the Phonebook.

Image viewer

View your saved images.

- 1. Press **Menu**, scroll to **and** press **OK**.
- 2. Select an image, then press **Options**.
- 3. Select one of the following options and press **OK** to confirm:

Image viewer, options

View

Single view. Press Back when done.

Send

Select an option, then press **OK**:

	Send the image as MMS. Press OK to create a message, see <i>Creating and sending MMS</i> , p.16
Via Bluetooth	Send the image to other Bluetooth devices, see <i>Bluetooth</i> , p.38

Delete

Press **OK** to delete selected image. Press **Yes** to confirm or **No** to return.

Use

Select an option from the list, then press **OK** to confirm.

Wallpaper	Saves the image as display background. Press OK to confirm
Phonebook picture	Sends the image to the phonebook. Press OK to confirm. Select To new contact to add a new phonebook entry or select To this contact to select an existent phonebook entry.

Details

Shows the creation date and the image size.

Rename

Rename the image. Delete with **Clear** and press **Done** to confirm.

Browse style

You can change image view. Default is **Large**, you can also select **List** or **Medium**.

In **List** the file name, the date and the size of the image is shown.

Sort by

Select if you want to sort your images by **Name** or **Time**.

Storage

Select where the phone should save files if you have memory card installed.

Delete all

Press **OK** to delete all images. Press **Yes** to confirm or **No** to return.

Settings

Note!

The settings described in this chapter are carried out in standby mode. Press — to return to standby mode.

General

Time & date

Setting the time and date

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select General and press OK.
- 3. Select **Time & date** and press **OK**.
- 4. Select **Set time** and press **OK**.
- 5. Enter the time (HH:MM), then press OK.
- 6. Select **Set date** and press **OK**.
- 7. Enter the date (**DD/MM/YYYY**), then press **OK**.

Setting the time/date format

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **General** and press **OK**.
- 3. Select **Time & date** and press **OK**.

- 4. Select **Set format** and press **OK**.
- 5. Select **Time format** and press **OK**.
- 6. Select 12 hours or 24 hours and press OK.
- 7. Select **Date format** and press **OK**.
- 8. Select the desired date format and press **OK**.

Setting Auto time on/off

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select General and press OK.
- 3. Select Time & date and press OK.
- 4. Select Auto time and press OK.
- 5. Select **On/Off** and press **OK**.

To set the phone to automatically update the time and date according to the current time zone, select **On**. Automatic update of date and time does not change the time you have set for the alarm clock or the calendar. They are in local time. Updating may cause some alarms you have set to expire. Depending on network support and subscription.

Language

The default language for the phone menus, messages etc. is determined by the SIM card. You can change this to any other language supported by the phone.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select General and press OK.
- 3. Select Language and press OK.
- 4. Scroll \(\square\) to select a language, then press **OK**.

Owner number

The phone numbers assigned to your SIM card are saved in Owner number if this is allowed by the card.

To view/edit or the numbers:

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select General and press OK.
- 3. Select **Owner number** and press **OK**.

See *Phonebook*, p.12 on how to add names/numbers.

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Block function

You can disable functions to simplify use of the phone.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select General and press OK.
- 3. Select **Block function** and press **OK**.
- 4. Select each function you want to disable and press Off.
- 5. Press **Done** to confirm.

Network setup

Your phone automatically selects your (service provider's) home network if this is within range. If not within range, you may use another network, provided your network operator has an agreement that allows you to do so. This is called roaming. Contact your service provider for more information.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select General and press OK.
- 3. Select **Network setup** and press **OK**.
- 4. Select one of the following options and press **OK** to confirm:

Select network

New search

Perform new search if connection is lost.

Sel. network

To view available network, press **Sel. network**. A list of available network operators is displayed (after a short delay). Select desired operator and press **OK**.

Network mode

To select another network, select **Network mode** and then select one of the following options:

Automatic	Network is selected automatically.
	Network is selected manually. Use Sel. network to select desired operator.

Service selection

Select the type of service for your phone.

GSM	GSM service only
3G	3G service only
	Your phone automatically switch between GSM and 3G for best service.

IMPORTANT!

If you set your phone to use GSM only or 3G only, you will not be able to make any calls, including emergency calls, or use other features requiring a network connection, if the selected network is unavailable.

Network information

View your current network settings.

Services

This menu may contain pre-programmed services from your network provider. Depending on network support and subscription.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **General** and press **OK**.
- 3. Select Services and press OK.

Phonebook storage

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select General and press OK.
- 3. Select Phonebook storage and press OK.
- 4. Select one of the following options and press **OK** to confirm:

1 phone number per contact. Number and length of the phone numbers/contacts that can be stored will vary depending on SIM card/service provider preferences.
300 contacts with 3 phone numbers each Mobile , Home or Office .

Phonebook picture

You can change the phonebook view mode. Select **On** to see the contacts associate picture (**Picture**), or select **Off** to display only the names of contacts.

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select General and press OK.
- 3. Select Phonebook picture and press OK.
- 4. Select On/Off.
- 5. Press **OK** to save.

Sound ®

Note!

Silent needs to be set to **Off** to access Tone setup, Volume, Alert type and Extra tone. See Silent, p.26.

Audio setup ©

If you use a hearing aid or have hearing difficulties when using the telephone in a noisy environment, you can customize the phone's audio settings.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Sound and press OK.
- 3. Select Audio setup and press OK.
- 4. Select one of the following options and press **OK**:

Normal	For normal hearing in normal conditions
Medium	For mild hearing impairment or usage in noisy environment
	For moderate hearing impairment or usage in very noisy environment

Tone setup

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Sound and press OK.
- 3. Select **Tone setup** and press **OK**.
- 4. Select **Ring tone** and press **OK**.

- 5. Scroll \(\subseteq / \subseteq \tau \) to select one of the available melodies, the melody will be played. Press **OK** to confirm, or press **Back** to discard changes.
- 6. Set up the Alarm, Message tone, Opening tone, Closing tone, Keypad tone, Power on and Power off in the same way.

Ringtone volume

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Sound and press OK.
- 3. Select Volume and press OK.
- 4. Scroll \(\sum / \subset \text{to change the ring volume, then press **OK**.

Alert type

Incoming calls can be signalled by a ring tone and/or vibration.

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select **Sound** and press **OK**.
- 3. Select Alert type and press OK.
- 4. Scroll \(\square\) to select signalling mode, then press **OK**.

Ring only	Ring tone only
Vib. only	Vibration only
Vib & ring	Vibration and ring tone
Vib->ring	Starts with vibration and adds ring tone after a short while

Extra tone

Warning and error tones are used to alert you of low battery power, phone and SIM card errors, etc.

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select **Sound** and press **OK**.
- 3. Select Extra tone and press OK.
- 4. Select Warning and press On/Off to enable/disable.
- 5. Select **Error** and press **On/Off** to enable/disable.
- 6. Press **Done** to save.

Silent

- Press Menu, scroll to and press OK.
- 2. Select **Sound** and press **OK**.

- 3. Select Silent and press OK.
- 4. Select **On/Off** to enable/disable.
- 5. Press **OK** to save.

Tip:

In standby mode, press and hold shortcut key # to activate/deactivate Silent.

Display ®

Wallpaper

You can select different display backgrounds.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Display** and press **OK**.
- 3. Select Wallpaper and press OK.
- 4. Select System or User defined and press OK.
- 6. User defined:
 - Select Phone/Memory card and press Open.
 - Select a folder, eg **Photos** and press **Open**.
 - Select a file and press OK.

Text size **◎**

You can customize the text size for menues, messages and phonebook.

- Press Menu, scroll to and press OK.
- 2. Select **Display** and press **OK**.
- 3. Select **Text size** and press **OK**.
- 4. Select **Normal** or **Large** and press **OK**.

Note!

Using **Large**, may result in that some text will not fit in the display. In most cases this is compensated by scrolling text.

Idle display

In standby mode the display can show clock only, clock and the service provider, or all information.

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select **Display** and press **OK**.
- 3. Select **Idle display** and press **OK**.
- 4. Select Clock only, Network/clock or All info and press OK.

Themes

You can select different themes to personalise the phone's texts and background.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Display** and press **OK**.
- 3. Select **Themes** and press **OK**.
- 4. Scroll \(\square\) to select a theme.
- 5. Press **OK** to confirm or **Back** to discard changes.

LCD backlight

Select the delay time for the display backlight.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Display** and press **OK**.
- 3. Select **LCD backlight** and press **OK**.
- 4. Select 15 sec., 30 sec. or 1 min. and press OK.

Brightness

You can customize the phone's brightness settings.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Display** and press **OK**.
- 3. Select **Brightness** and press **OK**.
- 4. Select Level 1 Level 3 and press OK.

Calls

Voice mail

If your subscription includes an answering service, callers can leave a voice mail message when you cannot answer a call. Voice mail is a network service and you may need to subscribe to it first. For more information and for the voice mail number, contact your service provider.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Calls and press OK.
- 3. Select Voice mail and press OK.
- 4. Select **Empty** and press **Add**.
- 5. Select **Phonebook** to add a contact from the phonebook. Alternatively, press **Manual**. See *Phonebook*, *p.12* on how to add names/numbers.
- 6. Press **OK** to confirm.

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Call voice mail

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select Calls and press OK.
- 3. Select Voice mail and press OK.
- 4. Select **Options** and press **OK**.
- 5. Select **Call voice mail** and press **OK** to call the voice mailbox.

Tip:

In standby mode, press and hold shortcut key 11 to call your voice mail.

Speed dial

A, B, C, D and the numerical keys 0 and 2-9 can be used for speed dialling.

Adding speed dial numbers

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Calls and press OK.
- 3. Select **Speed dial** and press **OK**.
- 4. Select A and press Add.
- 5. Select an entry from the phonebook and press **OK**.
- 6. Repeat to add speed dial entries for keys B, C, D, 0, 2-9.

To change contact, select an existing entry and press **Options**, then select **Edit** or **Delete** and press **OK**.

To speed dial an entry from standby, press and hold corresponding key.

You can edit the contact information for the dedicated speed dial keys **A**, **B**, **C** and **D**.

- 1. Press corresponding key. Use \(\sigma / \sigma \) to highlight the name or the number, then press **Edit**.
- 2. Press **OK** to confirm. Delete with **Clear**.

Top 10 setting

Set the entry as one of the first 10 contacts listed in the phonebook.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Calls and press OK.
- 3. Select **Top 10 setting** and press **OK**.
- 4. Select one of the empty entries and press Add.
- 5. Use \(\sigma / \sigma \) to scroll through the **Phonebook**, or quick search by pressing the key corresponding to the first letter of the entry.
- 6. Press **OK** to save the selected entry, or press **Back** to return to the menu.

To modify a Top 10 entry, select the entry in the Top 10 list and press **Options**, then **Edit** or **Delete**.

Call time

During a call, the duration of the call is shown. You can check the duration of your calls.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Calls** and press **OK**.
- 3. Select **Call time** and press **OK**.
- 4. Select an option and press **OK**:

Last call	Show the elapsed time of the most recent call
Dialled calls	Show the elapsed time of all dialled calls

Received calls	Show the elapsed time of all received calls
Reset all	Press Yes to reset the timer, or No to return to the menu

Answer mode

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select Calls and press OK.
- 3. Select **Answer mode** and press **OK** for the following settings:
- 4. Select **Open to answer** and press **OK**, select **On** and press **OK** to be able to answer incoming calls by opening cover.

 Select **Any key** and press **OK**, select **On** and press **OK** to be able to answer incoming calls by pressing any key (exemption).

Call setup

Depending on network support and subscription. Contact your service provider for more information.

Caller ID

Display or hide your phone number on the recipient's phone when you call.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Calls and press OK.
- 3. Select **Call setup** and press **OK**.
- 4. Select Caller ID and press OK.
- 5. Select an option and press **OK**.

Set by network	Use default setting by the network
Hide ID	Never show your number
Send ID	Always show your number

Call waiting

You can handle more than one call at a time. An alert tone will be heard if there is an incoming call while talking. To put the current call on hold and answer the incoming call, press **Options**, select **Answer** and then **OK**.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Calls and press OK.

- 3. Select Call setup and press OK.
- 4. Select **Call waiting** and press **OK**.
- 5. Select an option and press **OK**.

Activate	Enables call waiting
Deactivate	Disables call waiting
Query status	Displays if call waiting is active or not

Call divert

You can divert calls to an answering service, or to another phone number. Set up which calls should be diverted. Select a condition and press **OK**, then select **Activate**, **Deactivate** or **Query status** (see *Call waiting*, *p.31*) for each.

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select Calls and press OK.
- 3. Select **Call setup** and press **OK**.
- 4. Select **Call divert** and press **OK**.
- 5. Select an option and press OK.

Voice calls	Diverts all voice calls
Unreachable	Diverts incoming calls if the phone is turned off or out of range
No reply	Diverts incoming calls if unanswered.
If busy	Diverts incoming calls if the line is busy.
Cancel diverts	Do not divert calls.

Call barring

Your phone can be restricted to disallow certain types of calls.

Note!

A password is needed to apply Call barring. Contact your service provider to get the password.

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select Calls and press OK.
- 3. Select **Call setup** and press **OK**.
- 4. Select Call barring and press OK.
- 5. Select an option and press **OK**.

Outgoing calls	Press OK then select:
All calls	User can answer incoming calls but not dial out.
Internat.calls	User can not call international numbers.
Int. except home	User can not call international numbers except to the country associated with the SIM card.
Incoming calls	Press OK then select:
All calls	User can dial out but not receive incoming calls.
When roaming	User can not receive incoming calls while roaming (operating in other networks).
Cancel all	Cancel all call barring (password needed).

Messages

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Messages and press OK.
- 3. Select one of the following options and press **OK**:

Predictive text

Select **On** and press **OK** to enable Predictive text/eZiType $^{\text{T}}$, see *Entering text* $^{\text{E}}$, p. 7.

Write speed 🐒

You can change the speed at which keyboard characters repeat (before the cursor moves onto the next character).

Select Slow, Normal or Fast and press OK.

SMS

Profile set

This number is needed to use the SMS function. The number to your service centre is supplied by your service provider and is usually set on the SIM card. If the service centre number is saved on the SIM card it is shown. If not, you can enter the number yourself. Contact your service provider for more information.

 Select Profile set and press Edit to edit the service centre number. Press Clear to erase. 2. Press Save to confirm.

Memory status

Displays the percentage of memory space used on the SIM card and in the phone memory. Phone memory can store up to 450 messages.

Storage

- 1. Select **SIM** (default) to store messages on the SIM card, or **Phone** to store messages in the phone memory.
- 2. Press **OK** to confirm.

Cell information

You can receive messages on various topics from your service provider, such as weather or traffic conditions in a particular region. For available channels and relevant channel settings, contact your service provider. Cell broadcast messages cannot be received when the device is roaming.

Select **Cell information** and press **OK** for the following settings:

Function on/off	To turn information On or Off .
Read	Select Read and press OK to read the message.
Languages	Select language On/Off and press Done.
Settings	Select from which channels you want to receive/subscribe messages. Use the options Select , Add , Edit and Delete to define your channels.

MMS

MMS profile

These settings are needed to use the MMS function. The settings for MMS is supplied by your service provider and can be sent to you automatically via SMS. If not, you can select a pre-configured profile for your service provider.

- 1. Select **MMS profile** and press **OK**.
- 2. Select your service provider and press **Options**.
- 3. Select Activate and press OK.

If your service provider is not in the list, do the following:

- 1. Select MMS profile and press OK.
- 2. Select **Empty** and press **Options**.
- 3. Select **Edit** and press **OK** for the following settings: Enter the settings for your service provider. The correct settings can be obtained from the service provider.

Profile name	Edit the profile name, then press OK.
MMSC address	Edit the MMSC address, then press OK.
Data account	Select Empty . When all MMS profile settings is done, finalize the Data account settings in <i>Settings/Connectivity/Data account</i> , <i>p.40</i> .
Connection type	Select connection type (HTTP or WAP), then press OK. Edit Proxy address, Proxy port or IP address. Press OK to confirm.
User name	Edit the User name, if needed, then press OK.
Password	Edit the Password, then press OK.

- 4. Press **Done**, and press **Yes** to save or **No** to go back.
- 5. Select your new profile and press **Options**.
- 6. Select Activate and press OK.

You can also activate/modify a MMS profile by selecting one and press **Options** to **Activate/Edit/Delete** the account.

Note!

Some service provider's require you to send an MMS message before you will be able to receive one. Send a MMS with text only to activate the service. Some service provider's require that you contact them before enabling MMS for your account. Contact your service provider's Customer Services. Press during set up to exit without saving.

Memory status

Displays the memory space used in phone memory.

SMS Reminder

The SMS reminder alerts you once if you haven't checked your text message within 10 minutes from receipt. If notification envelope is removed by pressing , no reminder will be heard.

Select **SMS Reminder** and press **OK**. Select **On/Off** to enable/disable and press **OK**.

Vibration

The SMS vibration alert is several short vibrations that continues for either **Short** (4 seconds) or **Long** (12 seconds).

Note!

If Alert type is set to Ring only the phone will not vibrate.

Delete

Select **Inbox** and press **OK** to delete all messages in Inbox. Press **Yes** confirm or **No** to discard changes.

Select **Outbox** and press **OK** to delete all messages in Outbox. Press **Yes** confirm or **No** to discard changes.

Select **Sent** and press **OK** to delete all messages in Sent. Press **Yes** confirm or **No** to discard changes.

Select **Delete all** and press **OK** to delete all messages at the same time. Press **Yes** confirm or **No** to discard changes.

Delivery report

You can select if you want the phone to notify you when your SMS has reached the receiver.

Select **Delivery report** and press **OK**. Select **On** or **Off** to enable/disable. Press **OK** to save.

Note!

If you choose **Delivery report On**, some operators will charge you for that message.

Emergency +

Settings for the Emergency key function.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Emergency** and press **OK** for the following settings:

Activation

Select one of the following options and press **OK**:

On Normal	To activate, press and hold key for approximately 3 seconds, or press 2 times within 1 second.
On (3)	To activate, press key 3 times within 1 second.
Off	Emergency key disabled.

Numbers list

The list of numbers that will be called when the Emergency key is pressed.

- 1. Select **Empty** and press **Add**.
- 2. Select **Phonebook** to add a contact from the phonebook. Alternatively, press **Manual**. See *Phonebook*, *p.12* on how to add names/numbers.
- 3. Press **OK** to confirm.

Repeat until you have 5 contacts (maximum).

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

SMS

The message to be sent to the contacts in **Numbers list** when the Emergency key is pressed.

Activation

Select one of the following options and press **OK**:

On	The phone sends a text message before dialling.
Off	The phone dials without sending a message first.

Message

Press **Edit** and enter the message and then press **OK** to confirm.

Note!

You must write a message if you activate the SMS function.

Confirm with "0"

Select one of the following options and press **OK**:

Off	The phone will dial the first number on the list. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until is pressed.
On	The function will work as above AND: If the receiver doesn't press within 60 seconds the call will be disconnected and the next number in sequence will be called. If the receiver presses within 60 seconds, the call is confirmed and no further call attempts will be made (emergency sequence interrupted).

Signal type

Adjustment of the signal type for notification of the emergency sequence.

Select one of the following options and press **OK**:

High	Loud signals (default).
Low	One low signal.
Silent	No sound indication, like a normal call.

Alarm info

Please read this important safety information before enabling the emergency function:

Be careful about including numbers with automatic answering in the call list, as the alarm sequence stops once the call is answered.

Note!

This information is not applicable if **Confirm with "O"** is set to **On**.

Connectivity

Bluetooth

IMPORTANT!

When you are not using Bluetooth connectivity, select **Function on/off** / **Off** or **Visibility** / **Off**. Do not pair with an unknown device.

You can connect wireless to other Bluetooth® compatible devices such as headsets.

- 1. Press **Menu**, scroll to \nearrow and press **OK**.
- 2. Select **Connectivity** and press **OK**.
- 3. Select **Bluetooth** and press **OK** for the following settings:

Function on/off

Select **On/Off** and press **OK** to enable/disable Bluetooth.

Visibility

Select **On/Off** to make your phone visible/invisible to other devices.

Note!

To prevent other devices from finding your device, select **Off**. Even if you select **Off**, paired devices can still detect your device.

Device name

Enter the name your phone should appear with for other Bluetooth devices and press **OK**.

Search device

Search for available Bluetooth audio devices. If Bluetooth is not enabled you can enable it now by pressing **Yes**.

- 1. Select from the list of devices and press **Bond** to connect.
- 2. When connecting to another Bluetooth device you need a shared password. Enter the password and press **OK**.

My device

Lists saved devices and enables you to add new devices. Select device from the list and press **Options**.

Connect/ Disconnect	Connect/disconnect selected device. Select required profile, usually a headset.
Set default	Select the connected device as default.
Rename	Change the name of the device.
Delete	Delete the device from the list.
Delete all	Delete all devices from the list.

Audio path

Select one of the following options and press **OK**:

Phone	Incoming calls are answered with the phone.
Forward BT	Incoming calls are forwarded to Bluetooth device.

Data account

These settings are needed to use the MMS function. The settings is supplied by your service provider and can be sent to you automatically via SMS. If not, you can select a pre-configured profile for your service provider.

If your service provider is not in the list, do the following:

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Connectivity and press OK.
- 3. Select **Data account** and press **OK**.
- 4. Select **Empty** and press **Options**.
- 5. Select **Add** and press **OK** for the following settings: Enter the settings for your service provider. The correct settings can be obtained from the service provider.

Account name	Edit the account name, press Options and then Done.
APN	Edit the APN address, press Options and then Done .
	Edit the User name, if needed, press Options and then Done.
Password	Edit the Password, press Options and then Done.

6. Press **Done**, and press **Yes** to save or **No** to go back.

You can also modify a data account by selecting one and press **Options** to **Add/Edit/Delete** the account.

Security

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Security** and press **OK**.

SIM lock

The SIM card is protected with a PIN code (Personal Identification Number). The phone can be set to ask for the PIN code on startup.

Select one of the following options and press **OK** to confirm:

English

On	PIN code activated, you need to enter the PIN code every time the phone is started.			
Off	PIN code deactivated. Warning, if SIM card is lost/stolen it is unprotected.			
Automatic	You do not need to enter the PIN code when the phone is started, the phone remembers it automatically. If SIN card is moved to another phone (lost/stolen), the PIN code needs to be entered to unlock.			

Note!

You need to input the current PIN code to disable/enable SIM lock.

Phone lock

Select On/Off and press OK to enable/disable.

Note!

You need to input the current Phone code to disable/enable Phone lock. The default Phone code is **1234**.

Fixed dial (FDN)

You can limit calls to certain numbers saved on the SIM card. The list of allowed numbers is protected by your PIN2-code.

Mode	Select On/Off and press OK . Enter PIN2 and press OK to confirm.			
Fixed numbers	Press Add to enter the first allowed number. Alternatively, select an entry and press Options for the following settings: Add , Edit or Delete and press OK . Enter PIN2 and press OK to confirm.			

Note!

You can save parts of phone numbers. For example, if you save 01234, allows calls to all numbers starting with 01234. It is possible to place an SOS call by entering the main local emergency number followed by even when fixed dial is activated. When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card. You are not able to send any SMS either.

Remote configuration

Allow persons that you trust, usually a family member or friend, to send information to your Doro PhoneEasy® 614. You can receive

phonebook contacts and contacts for speed dial keys, calendar tasks and settings for the emergency key. When activated, you don't have to do anything, it's the other person that sends information to you.

Select **Remote config** and press **OK** for the following settings:

Activation

Select **On** to activate remote configuration and press **OK**.

On	Remote configuration enabled.		
Off	Remote configuration disabled.		

Numbers list

You need to add the name and number of the people who are allowed to send information from their phone to your Doro PhoneEasy® 614.

- 1. Select Numbers list and press OK.
- 2. Select **Empty** and press **Add**.
- 3. Select **Phonebook** if you want to add a contact from the Phonebook.
 Alternatively, press **Manual**.
- 4. Press .
- 5. Enter the number and press **OK**.

Repeat until you have 5 contacts (maximum).

To edit or delete an existing entry, select it and press **Options**, then select **View**, **Edit** or **Delete** and press **OK**.

Passwords

To change the **PIN**, **PIN2** or the **Phone code** passwords:

- 1. Enter the current code and confirm with **OK**.
- 2. Enter a new code and confirm with **OK**.
- 3. Enter the new code again and confirm with **OK**.

Reset settings

If you select **Reset settings**, the changes that you have made to the phone settings will be reset to default settings. Input the phone password and press **OK** to reset.

Reset all

If you select **Reset all**, your phone settings and content, such as contacts, number lists and messages, will be deleted (in phone memory, SIM memory/Memory card is not affected). Input the phone password and press **OK** to reset.

Note!

The default Phone code is 1234.

File manager

Use File manager to manage the contents and properties of files. You can open, delete, move, copy and rename files.

Supported image format: BMP/GIF/JPG/PNG.

Supported audio format: WAV/AMR/MIDI/MP3/AAC/AAC+. Recordings made with the built in sound recorder are saved as AMR.

Supported video format: MP4/3GPP. Only playback of received files is possible.

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **File manager**, then press **OK**.
- 3. Select **Phone/Memory card** and press **Open**.
- 4. Select a folder, eg **Photos** and press **Open**.
- 5. Select a file and press **Options** for the following options:

Play (audio/video/music)

Play file. Use to Play, use to Stop playback. Press Back when done.

View (photos/images)

Single view. Press Back when done.

Send

Select an option, then press **OK**:

English

Send by MMS	Send the file with MMS. Press OK to create a message, see <i>Creating and sending MMS</i> , p.16		
Via Bluetooth	Send the file to other Bluetooth devices, see <i>Bluetooth</i> , p.38		

Details

View detailed information about the file, e.g. date, size, copyright-protection.

Use

Select an option from the list, then press **OK** to confirm.

Wallpaper	Saves the file as display background. Press OK to confirm		
	Saves the file to a phonebook contact. Press OK to confirm. Select To new contact to add a new phonebook entry or select To this contact to select an existent phonebook entry.		

Rename

Rename the file. Delete with **Clear** and press **Done** to confirm.

Delete

Press **OK** to delete selected file. Press **Yes** to confirm or **No** to return.

Delete all

Press **OK** to delete all files in selected folder. Press **Yes** to confirm or **No** to return.

Sort by

Select if you want to sort your files by **Name** or **Time**.

Copy/Move

To copy or move a file to another folder:

- 1. Select Copy/Move and press OK.
- 2. Select Phone/Memory card and press Options.
- 3. Select Open and press OK.
- 4. Select a folder, eg **Photos** and press **Options**.

5. Select Paste and press OK.

Additional functions

Alarm

- 1. Press **Menu**, scroll to A and press **OK**.
- 2. Select **On** and press **OK**.
- 3. Enter the alarm time using the keypad, then press **OK**.
- 4. For a single occurrence, select **Single** and press **Save**.
- 5. For a repeated alarm, select **Repeated** and press **OK**. Scroll through the list of weekdays and press **On/Off** to enable/disable the alarm for each weekday, then press **Done**.
- 6. To edit an alarm, select **Edit** and press **OK**.
- 7. To stop the alarm, select **Off** and press **OK**. The alarm is now deleted.

Note!

The alarm will work even when the phone is switched off. Do not press **Yes** to power on if wireless phone use is prohibited or when it may cause interference or danger.

When the alarm goes off a signal will sound. Press **Stop** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.

Calendar

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select **Options**.
- 3. Select one of the following options and press **OK**:

View

Show tasks for the selected date.

Add task

- 1. Enter a date for the task, then press \checkmark .
- 2. Enter a time for the task, then press \checkmark .
- 3. Enter a description for the task, see *Entering text* \$\sqrt{p}\$, p. 7.
- 4. Press **Save** to save the task.

At the set date/time, an alert tone will be played and the task description will be shown on the display Press **Silent** and then **OK** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.

Jump to date

Enter the date and press **OK**.

View all

Select a task and press **Options** for the following options:

Edit	Edit the selected task			
Delete	Delete the selected task			
Delete all	Delete all tasks			

Note!

The calendar will work even when the phone is switched off. Do not press **Yes** to power on if wireless phone use is prohibited or when it may cause interference or danger.

Calculator

The calculator can perform basic mathematical operations.

- 1. Press **Menu**, scroll to \blacksquare and press **OK**.
- 2. Enter the first number. Use # to enter decimal points.
- 3. Use the arrow keys to select an operation $(+, -, x, \div)$ and press **OK**.
- 4. Enter the next number and press **OK**.
- 5. Repeat steps 2–4 as necessary. Select = and press **OK** to calculate the result.

FM radio

The FM radio has a frequency range from 87.5 to 108.0 MHz and 9 preset channels.

Turning the radio on

- 1. Connect the headset to the headset socket \bigcap .
- 2. Press **Menu**, scroll to and press **OK**. The radio is turned on. The tuned frequency is displayed. Use the side keys +/- to adjust the volume.

3. Press to return to standby mode. The radio will continue to play.

Save frequency

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select channel using \checkmark or \land .
- 3. When a station has been found, select **Options**.
- 4. Select Save frequency and press OK.
- 5. Enter a name for the new channel, see *Entering text* , p. 7.
- 6. Press Save.

Switch off

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Press **Options**, and then press **Switch off**.

Tip:

Disconnecting the headset will also turn off the radio.

Channel list (editing the channel list)

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Options.
- 3. Select Channel list and press OK.
- 4. Select the channel you wish to edit and press **Options**.
- 5. Select one of the following options and press **OK**:

Play	Play the selected channel.
Delete	Delete the channel. Press Yes to confirm or No to return to the channel list.
Edit	Press Edit to edit the channel name. Press to edit the frequency, use # to enter the decimal point. Press Save .

Selecting channels

Press keys 11-9 to quick-select a preset channel while the radio is playing.

Manual input (changing search mode)

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Options.
- 3. Select **Manual input** and press **OK**.
- 4. Select one of the following options and press **OK**:

Fine tune	Manual tuning with \checkmark or \checkmark .
Auto Search	Automatic station search with \checkmark or \checkmark .

Auto save

Note!

This will overwrite all previously saved channels!

- 1. Press **Menu**, scroll to and press **OK**.
- 2. Select Options.
- 3. Select **Auto save** and press **OK** to automatically install available radio stations in channels **1**-**9**.

Instructions for the REMOTE USER

Sending remote control commands by text message.

Activation must be set to **On** and the remote user must be entered in **Numbers list** on the Doro PhoneEasy® 614.

Menu → Security → Remote config.

All contacts sent to Doro PhoneEasy® 614 by remote configuration are stored in the Phone (even if storage is set to SIM).

3 phone numbers for each contact Mobile, Thome or Golfice.

Note!

SMS format must be *#Command#, otherwise the SMS cannot be identified as a remote control command.

Parameters are the content you want to send and you must use # sign to separate two parameters. In tables P = Parameters.

Setting a contact in the phonebook

Command	P 1	P 2	P 3	P 4
phonebook	name max. length=30	mobile max. length=40	home	office

Example:

You want to send Jeff Jackson's mobile number, home number and his office number to Doro PhoneEasy® 614. The mobile number is: 0700-393939. Home number: 046-280 50 11. Office number: 046-280 50 83.

The number will be saved in the 614 Phonebook as:

9	Jeff Jackson
	0700393939
	0462805011
Ha	0462805083

Note!

Only use numerals for parameters 2, 3 and 4. If you use letters in these parameters it will be stored as empty/blank in the Phonebook. Contacts already saved in the Phonebook, will not be replaced. They will be duplicated. This is to avoid unintentional removal of contacts from the Phonebook.

Tip:

When storing international numbers, always use + before the country code for best operation. Enter the phone number including the area code.

^{*#}phonebook#Jeff Jackson#0700393939#0462805011#046280 5083#

Setting the emergency function

Command	P 1	P 2	P 3	P 4
alert	a activation	0/1/2 0=0ff 1=0n Normal 2=0n (3)		
alert	n number	1–5 location in Numbers list	Name max. length=30	number max. length=40
alert	m message	0/1 0=0ff 1=0n	Text max. length=70	
alert	c confirm with "0"	0/1 0=0ff 1=0n		
alert	s signal type	0/1/2 0=High 1=Low 2=Silent		

Example:

You want to activate the emergency function.

You want Jeff Jackson to be stored in Numbers list in position one (1) with phone number: 0700-393939.

You want the SMS message to be sent out when the emergency button is pressed. Example of content in text message: This is an emergency message. Please take appropriate actions.

You want to turn on the function Confirm with "O".

^{*#}alert#a#1#

^{*#}alert#n#1#Jeff Jackson#0700393939#

^{*#}alert#m#1#This is an emergency message. Please take appropriate actions.#

^{*#}alert#c#1#

You want to set the Signal type to low.

Tip:

Remember to write down the positions you send. This way it is easier for you to later send changes.

Setting the one touch memories

Command	P 1	P 2	P 4
memorykey	a	Name	number
	A key	max length = 30	max length = 40
memorykey	b	Name	number
	B key	max length = 30	max length = 40
memorykey	c	Name	number
	C key	max length = 30	max length = 40

Example:

You want to set Jeff Jackson's mobile number in memory key **A** in Doro PhoneEasy® 614.

Martha Thomson in memory key **B** and Steve Lewis in memory key **C**.

Add task to calendar

Command	P 1	P 2	P 4
task	yyyymmdd Date	hhmm Time	note description of task. max. length = 35

Example 1:

You want to send a new calendar task to Doro PhoneEasy® 614. It is for a dentist appointment in December 1, 2010 at 10:30.

^{*#}alert#s#1#

^{*#}memorykey#a#Jeff Jackson#0700393939#

^{*#}memorykey#b#Martha Thomson#0768991014#

^{*#}memorykey#c#Steve Lewis#0709441819#

^{*#}task#20101201#1030#dentist appointment#

Troubleshooting

Phone cannot be switched on

	Connect the power adapter and charge the battery for 3 hours.
Battery incorrectly installed	Check the installation of the battery.

Failure to charge the battery

Battery or charger damaged	Check the battery and charger.
Battery should only be charged in temperatures between 0 °C and 40 °C	Improve the charging environment.
Charger incorrectly connected to phone or power socket	Check the charger connections.

Standby time decreases

Battery charge capacity too low	Install a new battery.
Too far from base station, phone is constantly searching for signal	Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone.

Failure to place or receive calls

Call barring activated	Deactivate call barring. If this does not solve
	the problem, contact your service provider.

PIN code not accepted

Wrong PIN code entered	Enter the PUK code to change the PIN code,
too many times	or contact your service provider.

SIM card error

SIM card damaged	Check the condition of the SIM card. If it is damaged, contact your service provider.
SIM card incorrectly installed	Check the installation of the SIM card. Remove the card and reinstall it.
SIM card dirty or damp	Wipe the contact surfaces of the SIM card with a clean cloth.

Failure to connect to network

SIM card invalid	Contact your service provider.
No coverage of GSM service	Contact your service provider.

Weak signal

Too far from base station	Try again from another location.
Network congestion	Try calling at a later time.

Echo or noise

Regional problem from	Hang up and redial. This may switch to
bad network relay	another network relay.

Failure to add a contact

Phonebook memory full	Delete contacts to free up memory.
-----------------------	------------------------------------

Failure to set a function

or subscribed from	Contact your service provider.
network	

Safety instructions



CAUTION

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.

The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the WCDMA 900/2100 MHz, GSM 900/1800/1900 MHz networks. To use the device, you need a subscription with a service provider.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 cm be maintained between a handheld wireless phone and a

pacemaker to avoid potential interference with the pacemaker. Persons with pacemakers:

- Should always keep the phone more than 15 cm from their pacemaker when the phone is turned on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that interference is taking place, turn the phone off immediately.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Emergency calls

IMPORTANT!

Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice above applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

Specifications

Network: WCDMA 900/2100 MHz, GSM 900/1800/1900 MHz

Dimensions: 102 mm x 53 mm x 23 mm Weight: 115 g (including battery)

Battery: 3.7 V / 1000 mAh Li-ion battery

Bluetooth® is a registered trademark of Bluetooth SIG, inc.

eZiType™ is a trademark of Zi Corporation.

vCard is a trademark of the Internet Mail Consortium.

Hearing aids

This device should work with most hearing aid equipment in the market. However, full compatibility with all equipment can not be promised.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. Doro PhoneEasy® 614 measures 0.497 W/kg measured over 10 g tissue.

The maximum limit according to WHO is 2.0 W/kg measured over 10 g tissue.

Declaration of Conformity

Doro hereby declares that Doro PhoneEasy $^{\circ}$ 614 conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS). A copy of the Declaration of Conformity is available at www.doro.com/dofc

English

Version 2.0

www.doro.com

© 2011 Doro AB. All rights reserved.

C € 0700