

BT Digital Baby Monitor 200

User Guide



Bringing it all together



Welcome...

to your BT Digital Baby Monitor 200

- Digital sound quality with high definition sound (Hi-ds™) lets you hear your baby breathe, gurgle, snuffle or cry with complete clarity
- Wireless range of up to 300m outdoors and up to 50m indoors (in ideal conditions, where there is a clear line of sight between the units) – giving you the freedom to move around with clear reception and no interference from other baby monitors
- Out of range and battery low warnings
- Link light provides continuous confidence that the Parent unit is receiving a signal from the Baby unit and will alert you if the link is lost
- Talk Back feature lets you instantly reassure and calm your baby
- Nightlight on Baby unit
- Crying alert on Parent unit
- Mute All and Mute Low options on Parent unit
- Compact travel bag to fit all components



This User Guide provides you with all the information you need to get the most from your BT Digital Baby Monitor 200.

Please read this guide carefully and keep it for future reference.

Need help?

If you have any problems setting up or using your BT Digital Baby Monitor 200 (or would like any additional or replacement batteries), call our free BT Digital Baby Monitor Helpline on 0808 100 6554*. Our dedicated advisors are more likely to be able to help you than the retailer where you made your purchase.

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

Additional answers to Frequently Asked Questions are also available from www.bt.com/producthelp

Got everything?

- Baby unit
- Parent unit
- 2 x AA NiMH 1300mAh rechargeable batteries for Parent unit (pre-installed)
- Parent unit charger
- 2 x power adapters (item code 057711)
- Travel bag (located underneath top layer)

* Calls made from within the UK mainland network are free. Mobile and international call costs may vary.

Important safety information

- Your BT Digital Baby Monitor 200 is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision.
- Make sure the Baby unit, Parent unit and mains adapter cables are kept out of reach of your baby – at least one metre away.
- Never place the Baby unit inside your baby's cot, bed or playpen.
- Never cover your Parent or Baby units (e.g. with clothes, towels or blankets).
- Never use or place your Parent or Baby units in moist places or near water.
- If travelling abroad, make sure that the voltage shown on the mains power adapter corresponds to the local mains power before connecting to the power supply.
- There is a risk of explosion if the batteries are replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always dispose of batteries in accordance with applicable waste disposal regulations, never in your household rubbish.
- During continual use the Baby unit and Parent unit power adapters may become warm to the touch. This is normal and is not something to be concerned about.
- In the event of a power failure, when the power is restored all your settings will remain unchanged.

In this guide

Important safety information	4	Find	20
Your BT Digital Baby Monitor 200	6	List of tones	21
Parent unit	6	Reset the units.....	22
Parent unit charger	7	Reset the Parent unit	22
Baby unit	8	Reset the Baby unit.....	22
Back of Baby unit.....	9	Help	23
Setting up	10	General information	25
Using your BT Digital Baby Monitor 200		Cleaning.....	25
Switch the Baby unit on	14	Guarantee	25
Switch the Parent unit on	14	Product disposal instructions.....	26
Switch the Baby unit off	14	R&TTE	27
Switch the Parent unit off.....	15	Declaration of Conformance	27
Baby sound level LED indicators	15	User Guide formats	27
Adjust the Parent unit loudspeaker volume.....	16		
Mute All feature – Parent unit only....	17		
Crying alert	17		
Mute Low.....	18		
Talk Back	19		
Nightlight	19		

Your BT Digital Baby Monitor 200

Parent unit

Lanyard attach point (top of unit)

You can loop a lanyard (not supplied) through here.

Mute All (on top of unit)

Press to toggle the Parent unit receive volume between on and off.

Mute Low (on top of unit)

Press to toggle the Baby unit microphone sensitivity between normal and Mute Low.

Talk (on side of unit)


Press to talk to your baby.

Mute LED

Steady red indicates that Mute All has been switched on.
Amber indicates that Mute Low has been switched on.

- Vol.

Decrease speaker volume.

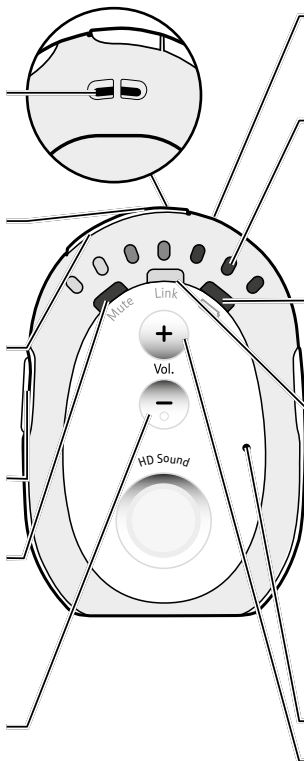

Power on/off (on top of unit)

Press and hold to switch the power on or off.

Baby sound level LEDs

Indicates the level of received sound. The LEDs will light up progressively as the sound increases. See page 15 for further information.

Low battery status indicator

Red light indicates the batteries are low and need re-charging.

Link status indicator

Steady green indicates that the Baby and Parent units are linked. Flashes green if not linked for the first 30 seconds. Flashes red if not linked for longer than 30 seconds. Also flashes green when the Talk button is pressed on the Parent unit to initiate parental talk back.


Microphone

+ Vol.

Increase speaker volume.

Parent unit charger


Front

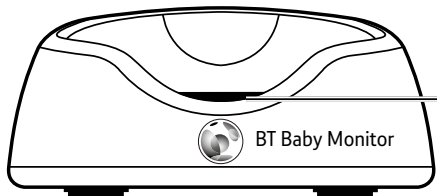

Charging light

Red when the Parent unit is correctly placed on the charger.

Back

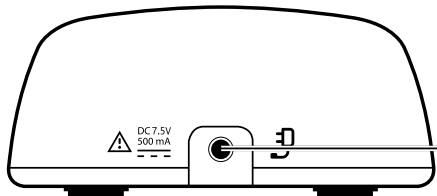

Power socket

For connection to the mains power socket via the power adapter cable supplied.

Baby unit

Nightlight

Press to switch the Nightlight on or off.


Power on/off

Press and hold to switch the power on or off.

Link indicator

Steady green indicates that the Baby and Parent units are linked. Flashes green if not linked for the first 30 seconds. Flashes red if not linked for longer than 30 seconds. Also flashes green when the Talk button is pressed on the Parent unit to initiate parental talk back.

Microphone

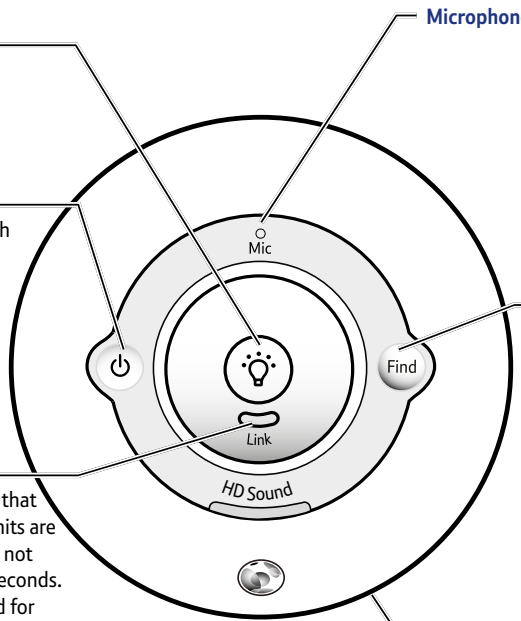


Find

Press to emit an alert beep from the Parent unit – useful for finding the Parent unit if you've misplaced it.

Nightlight illuminates around the base.

Back of Baby unit

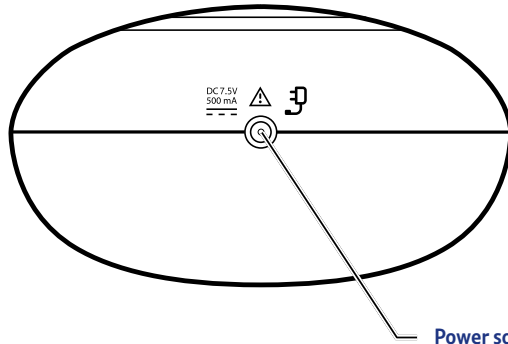

Power socket

For connection to the mains power socket via the power adapter cable supplied.

Setting up

WARNING!


Only use the power adapters supplied. Using incorrect power adapters may permanently damage your product.


Battery performance

Rechargeable batteries in the Parent unit will last approximately 20 hours in normal use. Please note that new batteries do not reach full capacity until they have been in normal use for several days.


The charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the performance time of the Parent unit. Eventually they will need to be replaced. New batteries can be obtained from the BT Digital Baby Monitor 200 Helpline 0808 100 6554*.

Parent unit


1. Plug one of the power adapter cables into the socket marked  on the back of the Parent unit charger and plug the other end into the mains power wall socket and switch the power on.

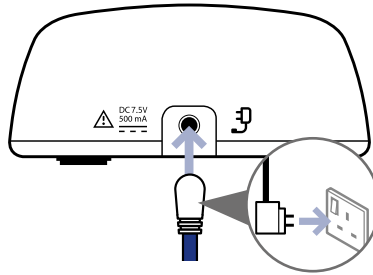

2. Activate the batteries by pulling the plastic tab away from the bottom of the Parent unit.

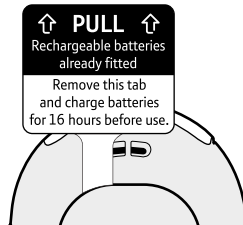

- Place the Parent unit into the charger. The red charging light will illuminate on the charger to indicate that the batteries are being charged.

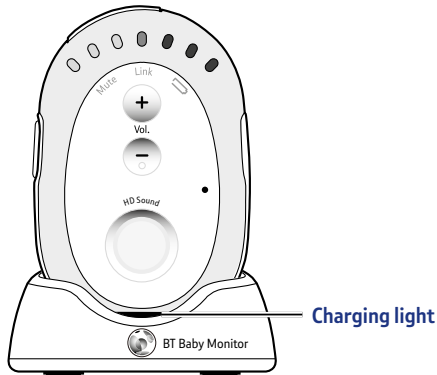

Leave the batteries to charge for 16 hours to reach maximum charge.

The Parent unit rechargeable batteries will lose charge over a period of time, even if switched off.

Battery low warning – Parent unit

When the batteries are low – approximately within 1 hour of running out – the Parent unit will emit a low battery alert and the low battery indicator on the unit will turn red. Place the Parent unit back on the charger to charge the batteries. To speed up the charging process turn the Parent unit off when charging if it's not being used.

You can still use your Parent unit to monitor your baby even when the batteries are low, provided it remains in the charger cradle to re-charge the batteries.

12 Setting up


WARNING


Never use non-rechargeable batteries in the Parent unit. Only use the recommended type – 2 x AA NiMH 1300mAh batteries. Using other types could permanently damage the unit. Charge the batteries as instructed in this user guide. The Parent unit can still be used when it is in the charger.

Removing the batteries



If you ever need to remove the batteries, simply slide open the battery compartment cover and use the ribbon to eject the batteries.

Baby unit

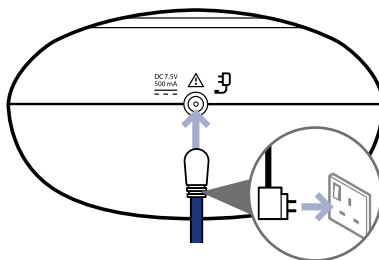1. Plug the remaining power adapter cable into the socket marked  on the back of the Baby unit and plug the other end into the mains power and switch on.



Switch on and link the Parent and Baby units

1. Press and hold the  button on the Baby unit for 1 second. The nightlight will briefly illuminate and then the green Link indicator will flash.
2. Press and hold the  button on the Parent unit until all the LEDs on the unit briefly illuminate. The green Link indicator will flash.

Once the units are linked, the green Link indicators on the Parent and Baby units will stop flashing and remain a steady green. The units are now ready to use.

Important:

The link confirmation between the two units is vital for use so they can communicate. If the link between the units is broken at any time, the Link indicators on the Parent and Baby units will flash green as they try to search for each other. After 30 seconds, if the link is still broken they will flash red and you will also hear an alert signal from the Parent unit.

If the link is broken:

- check that the mains power is plugged in and switched on at the Baby unit
- check that both units are switched on
- check that the batteries are charged in the Parent unit
- check that the Parent and Baby units are within range of each other (in ideal conditions the range is up to 300 metres outdoors and 50m indoors)


Positioning your units

The Baby unit should ideally be within 1m-2m of your baby for best performance.


If you place the Parent and Baby units too close together you will hear a high pitched noise, this is normal. The units are designed to be located at a distance from one another, e.g. in separate rooms.

Switching on/off


Switch the Baby unit on

1. Press and hold the  button for 1 second. The nightlight will briefly illuminate and then the green LED will flash until it Links with the Parent unit. Once linked the green LED will remain on.


Switch the Parent unit on

1. Press and hold the  button on the Parent unit until all the LEDs on the top of the unit briefly illuminate. The green Link indicator will flash. Once the units are linked, the green Link indicators on the Parent and Baby units will stop flashing and remain a steady green. The units are now ready to use.


Switch the Baby unit off

1. Press and hold the  button on the Baby unit. The green Link indicator will switch off.

Switch the Parent unit off

1. Press and hold the  button on the Parent unit until an audible alert sounds. The green Link indicator will switch off.

Baby sound level LED indicators

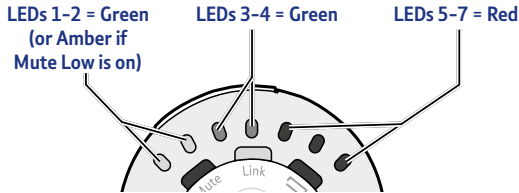

The seven LEDs across the top of the Parent unit light up to indicate the level of sound being received from the Baby unit. The LEDs light up progressively as the sound increases.

LEDs 1-2 light up Green (or Amber if Mute Low is on, see page 18) when sounds of 57dB and 63dB are received.

LEDs 3-4 light up Green when sounds of 69dB and 75dB are received.

LEDs 5-7 light up Red when sounds of 83dB, 89dB or 95dB are received.

Equivalent sound level examples:

60dB-70dB =
normal conversation

75dB = loud conversation

83-95dB = loud traffic noise



16 Using your BT Digital Baby Monitor 200



If you try and set the volume higher or lower than the 5 settings available on either unit you will hear an error tone.

Setting the Parent unit volume to Off is the equivalent of switching the Mute All feature on. See page 17 for more information on Mute All.

Adjust the Parent unit loudspeaker volume



There are 5 volume levels and off (Mute).
The default loudspeaker volume is Level 3.

1. Press  or  to select the required level. You will hear a difference in volume as you keep pressing the button(s).

If you wish to switch the volume off, keep pressing  until the Mute LED turns red (Mute All) or press the  button.

Mute All feature – Parent unit only

The Mute All feature prevents any sound coming out from the Parent unit loudspeaker. With Mute All on you can still monitor your baby using the Baby sound level LED indicators (page 15) and the Crying Alert (below).

1. To switch Mute All on, press the  button located on the top of the unit. The Mute indicator will illuminate red.
2. To switch Mute All off, press the  button again. The red Mute indicator will go off.



Crying alert

The crying alert will only be activated if Mute All has been switched on (or if the Parent unit loudspeaker volume has been switched off), see above for information on the Mute All feature.

With Mute All switched on, if your baby starts to cry you will not be able to hear the cries but if the cries sound above a certain level i.e. if they reach 83dB, which is the 1st red Baby sound level LED, then the Parent unit will emit an audible beep.

The crying alert is a 'user alert' as described on page 21.

Setting the Parent unit loudspeaker volume to Volume Off is the equivalent of switching the Mute All feature on.

If the  or  buttons are pressed whilst Mute All or Mute Low has been set then Mute All or Low will be switched off and the loudspeaker volume will return to Level 3 automatically.



18 Using your BT Digital Baby Monitor 200

Once the Mute Low sound threshold has been exceeded, baby sounds will be able to be heard for a further six seconds even if they do not reach the Mute Low threshold.

Mute Low


For discreet operation, when you do not wish to hear any low level sounds, you can still monitor your baby using the Baby sound level LED indicators (page 15).


When Mute Low is switched on, any sounds from the Baby unit to the Parent unit will be muted unless a sound is made above a set level. The set level are sounds that are louder than the first two green LEDs would register, as described in 'Baby sound level indications' on page 15. If the Parent unit receives sound up to the level of the first two LEDs then they will turn amber but no sound will be heard, if the sound rises above this level then the unit will un-mute so you can hear the sounds.


1. To switch Mute Low on, press the  button located on the top of the Parent unit. The Mute indicator will turn amber.
2. To switch Mute Low off, press the  button again. The amber indicator will switch off.

Talk Back

You can use the Parent unit Talk Back feature as a one way intercom to comfort and reassure your baby. By speaking into the Parent unit your baby will hear your voice from the Baby unit.

Please note that when using Talk Back you will not be able to hear your baby until you release the  button.



1. Press and hold down the  button on the Parent unit to speak to your baby.

Whilst the  button is depressed the green Link indicators will flash on both units.



Nightlight

You can set a comforting nightlight on the Baby unit.

Switch Baby unit nightlight on/off

1. To switch on, press the  button.
2. To switch off, press the  button.


You will be able to activate Talk Back mode even if other functions have been activated at the Baby unit e.g. Nightlight on.



Do not press the  button when the Baby unit and Parent unit are positioned in the same room. High-pitch noise will be generated if the  button is pressed when Baby unit and Parent unit are close to each other or within 3 metres distance.

When using Talk Back, hold the Parent unit approximately 30cm in front of your mouth when talking to baby.

The Baby unit must be switched on for the nightlight to work, but need not be linked to the Parent unit.

Find

You can press the  button on the Baby unit to make the Parent unit sound an alert beep to help you find it if it's been misplaced. If the Parent unit loudspeaker volume had been Muted (or set to volume off), the volume level will be reset to the default setting of Level 3.

1. Press  on the Baby unit. The paging alert will sound at the Parent unit.
2. To stop the alert, press any button on the Parent unit or press the  button again on the Baby unit. If no button is pressed after 2 minutes then the alert will automatically stop.

List of tones

Your Baby Monitor unit can produce various tones. They have the following meaning:

Tone	Meaning
Single tone	Confirmation tone e.g. setting saved.
Double tone (fast)	Error tone e.g. max volume reached when adjusting volume.
Double tone (slow)	User alert e.g. crying alert, paging alert etc.
Triple tone (fast)	System alert e.g. link lost, battery low etc.

User Alert tones can be silenced by pressing any button on the Parent unit.


System Alerts can be silenced for a 5 minute period by pressing any button on the Parent unit.

Resetting the units is only advisable if you are experiencing difficulties with your product. It is a useful feature that ensures your Baby Monitor is returned to its new “out of the box” settings.


Reset the units

Resetting either units will return the settings at that unit back to its default settings.

Reset the Parent unit

1. Within 3 seconds of the Parent unit being switched on, press and hold the  button for at least 10 seconds. You will hear a confirmation beep once the reset has been performed.

Reset the Baby unit

1. Within 3 seconds of the Baby unit being switched on, press the  button for at least 10 seconds. You will hear a confirmation beep once the reset has been performed.

Help


Helpline

If you have any problems using your BT Digital Baby Monitor 200, call 0808 100 6554*.

Link indicator does not come on

- Check that both the Baby and Parent units are switched on.
- Check that the batteries in the Parent unit are correctly installed and that they are charged.
- Check that the units are within range of each other.
- Check that the mains power is plugged in and switched on at the Baby unit.

Link light is flashing green

- If you have pressed  to use the Talk Back feature, the Link light will flash to indicate one-way communication between the units.
- The units are searching for a communication link.

- Check units are within range of one another.
- Check both units are turned on.

Link indicator is flashing red

- The Link between your units is broken. You will also hear an alert on the Parent unit to let you know there is no communication between the units. If this happens, check that the mains power (or batteries) is correctly connected and that the units are within range of one another. See page 12 for instructions on linking the units.

Battery low on Parent unit

- Put the Parent unit back on the charger to charge.
- Place the Parent unit back on the charger as frequently as possible or ideally leave it on the charger to ensure the batteries remain charged.

- To shorten the charging time you can turn the Parent unit off if it is not being used while it is charging.

Parent unit remains silent or very quiet

- You may have set the volume too low, see page 16 to increase the volume.
- You may have switched a Mute feature on, see pages 17-18.

You can hear a high pitched noise

- The units might be too close to each other.
- The volume setting might be too high, see page 16.

Talk back feature is not working

- Check that the units are linked.

General information

Cleaning

Both units have splash resistant grilles and casing. To clean, wipe with a damp cloth.

Guarantee

Your BT Digital Baby Monitor 200 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Digital Baby Monitor 200 or any component thereof, which is identified as faulty or below standard, or as a result of inferior workmanship of materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.

- This guarantee does not cover the batteries and any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period

Prior to returning your product, please read the Help section beginning on page 23 or contact the BT Digital Baby Monitor Helpline on 0808 100 6554* for assistance. Additional answers to Frequently Asked Questions are available from www.bt.com/producthelp

In the unlikely event of a defect occurring, the Helpdesk will issue a Fault Reference Authorisation (FRA) number and instructions for replacement or repair. Please note you will need the FRA number before returning the product. This does not affect your statutory rights.

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended or if you require technical assistance outside of the 12 month guarantee period, please call BT's approved technical support agent, Helpdesk Solutions on 0870 240 5029.

26 General information

Returning your product

If the Helpline is unable to remedy your problem they will issue a Fault Reference Authorisation number and ask you to return the product to your original place of purchase. Where possible, pack the product in its original packaging. Please remember to include all parts, including the power supply adapters and the original batteries.

For guarantee purposes proof of purchase is required so please keep your receipt.

Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.



The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

R&TTE

This product is intended for use within the UK.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Declaration of Conformance

Hereby, CCT declares that this BT Digital Baby Monitor 200 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for the BT Digital Baby Monitor 200 is available from www.bt.com/producthelp.

User Guide formats

This document is also available in other formats, such as Large print, Braille and Audio CD. If you would like a copy, please call 0808 100 6554*.

Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2010.

Registered Office: 81 Newgate Street, London EC1A 7AJ.

Registered in England No. 1800000.

Printed in China.

Designed and produced by The Art & Design Partnership Ltd.

BT Digital Baby Monitor 200 (11/10) Issue 1

