




# Baby Monitor

## Product Guide & Instructions

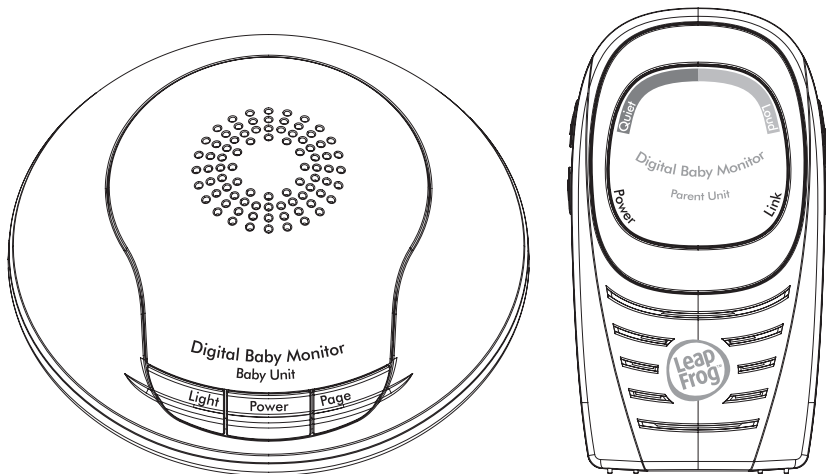

**THIS GUIDE CONTAINS IMPORTANT INFORMATION.  
PLEASE KEEP IT FOR FUTURE REFERENCE.**





# Baby Monitor

Thank you for purchasing this baby monitor. Please read the instructions and warnings carefully before use to ensure the safe and satisfactory operation of this product.

## Contents

Important safety information . . . . .	3
Your baby monitor . . . . .	4
Instructions for use. . . . .	5
Check the package contents. . . . .	5
Setting up the parent unit. . . . .	5
Setting up the baby unit . . . . .	6
Volume. . . . .	6
Using your baby monitor . . . . .	7
Battery low . . . . .	7
Baby alert . . . . .	7
Parent to parent paging. . . . .	7
Night-light . . . . .	7
Simple solutions . . . . .	8
Helpdesk . . . . .	8
General information . . . . .	9
Changing the batteries . . . . .	9
Guarantee . . . . .	10
WEEE Directive . . . . .	10



## Important safety information


Your baby monitor should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

Use of this equipment is no substitute for personal attention and supervision of a child.


- Keep the product and all its parts out of reach of small children.
- Batteries are small objects. Replacement of the batteries must be done by adults.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do NOT** leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- **Do NOT** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- **Do NOT** use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.
- **Do NOT** attempt to open the product. Unauthorised handling of the device may damage it and will void your warranty.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Radio signals transmitted between the parent and baby units may cause interference to hearing aids.
- **Do NOT** use your baby monitor near emergency/intensive care medical equipment, if you have a pacemaker fitted or during an electrical storm.



# Your baby monitor

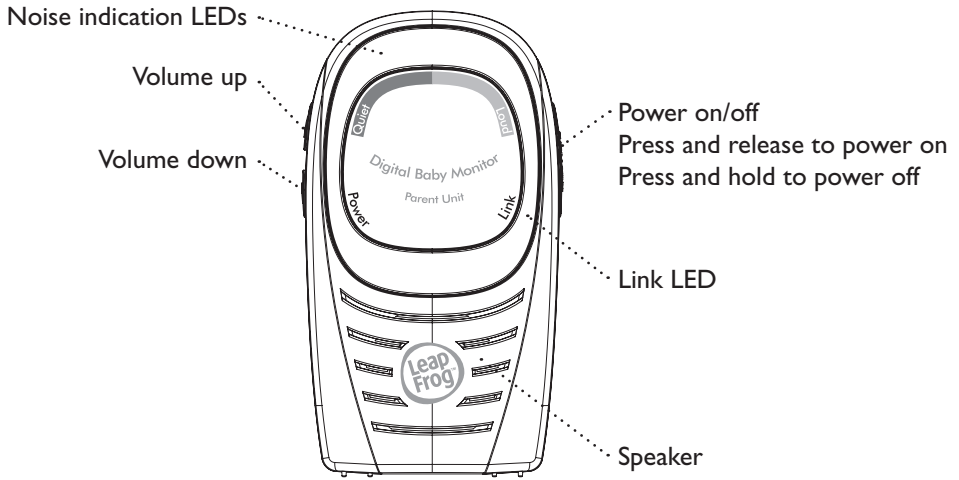

Battery compartment for non-rechargeable batteries (not supplied)

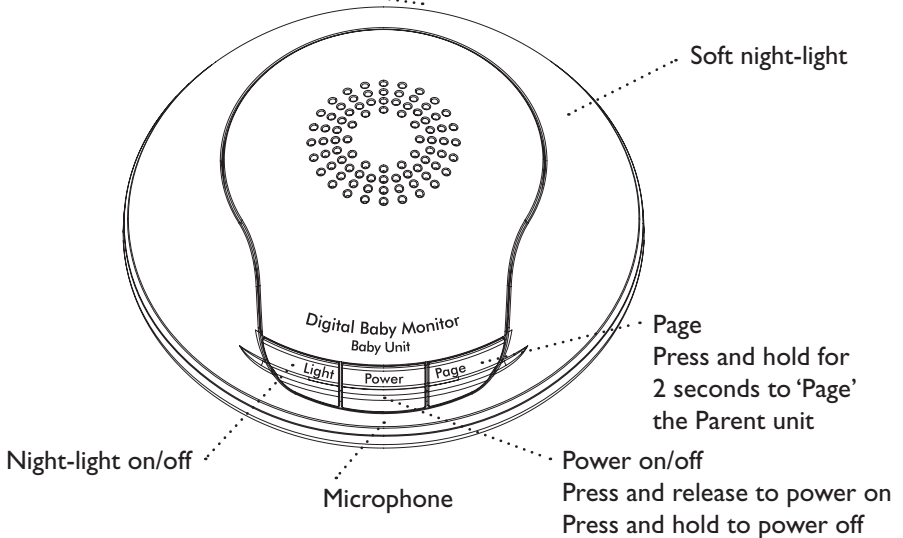



# Instructions for use

## Check the package contents


The package contains:

- 1 parent unit (receiver) with belt clip
- 1 charger pod with fixed mains adaptor
- 2 x 800mAh NiMH rechargeable batteries
- 1 baby unit (sender)
- 1 mains adaptor
- 1 travel bag
- 1 instruction manual

## Setting up


### At the parent unit

**1.** Remove the battery cover on the back of the parent unit with a crosshead screwdriver.

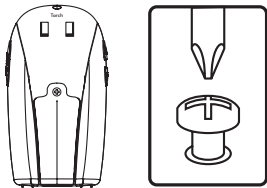

**2.** Insert the 2 x AAA 1.2V 800mAh Nickel Metal Hydride rechargeable batteries provided, taking care to note the '+' and '-' markings and position the batteries the correct way around. Replace the battery cover and re-tighten the screw.

**3.** Fit the belt clip by sliding into place until it clicks home.



**4.** Plug the charger pod mains adaptor into a mains power socket and switch on.

**5.** Place the parent unit in the charger pod and charge for a minimum of 13 hours before first use or if it has not been used for a long time.

The red LED on the charger pod will light up to confirm that the parent unit is charging and will remain on whilst the parent unit is in the charger pod.

**Note:** The parent unit cannot be used without rechargeable batteries, even if it is placed in the charger.

**6.** Press and release the 'Power' key on the side of the parent unit to switch it on.





## Setting up

### At the baby unit

1. Your baby unit does not require batteries to function but we recommend that you install them. Should there be a power cut, your baby unit can then switch to the backup (non-rechargeable) battery power.

2. Remove the battery cover on the bottom of the baby unit with a crosshead screwdriver. Insert 3 x AA alkaline batteries, taking care to note the '+' and '-' markings and position the batteries the correct way around. Replace the battery cover and re-tighten using the crosshead screwdriver.

**Note:** Do **NOT** use rechargeable batteries in the baby unit.

3. Connect the power lead to the bottom of the baby unit and plug the mains adaptor into a mains power socket and switch on.

4. Press and release the '**Power**' key to switch on.

**Note:** The baby unit should be placed about 1 m to 1.5 m away from the baby's cot or playpen on a flat and stable surface. Never place the baby unit inside the cot, bed or playpen. Make sure the unit, cords and mains adaptor are out of reach of the baby and other young children.

Never place either the parent or baby unit on antique or polished surfaces.

When you have set up your baby monitor, you will be able to hear the sounds in your baby's room through the speaker on the parent unit. The green and red noise indication LEDs will also rise and fall with the sound volume level. The more lights you see, the louder the noise, with the red lights indicating the loudest noise level.

**Note:** If the connection between the parent and baby unit is broken at any time, the '**Link**' light on the parent unit will flash and the green and red noise indication LEDs will no longer react to any sounds. To re-establish the link, please refer to page 8.

### Volume

You can adjust the volume of the sounds that you can hear through the parent unit by using the '**Volume + / -**' keys on the side of the parent unit. This will not affect the sensitivity of your baby monitor, only the volume of the sounds that you can hear.



# Using your baby monitor

## Battery charge indicator and battery low warning

The parent unit can operate for a maximum of 10 hours when it is out of the charger pod but this depends on the level of charge in the batteries.

If the battery level is low, the red **'Power'** light on the parent unit will begin to flash and you will hear a warning 'beep'. You should return your parent unit to the charger pod to re-charge the batteries. You can still use your parent unit whilst it is charging in the charger pod. (Check that the red LED on the charger pod lights up).

## Baby alert

If the volume on your parent unit is turned down very low, you will hear a warning beep if the noise levels in your baby's room activate the red lights on the parent unit. This is a really useful feature if you are just using the noise indication lights to monitor the noise levels in your baby's room.

To stop the alert tone and turn off the baby alert feature, just turn the volume back up on the parent unit.

## Parent to parent paging

This is a useful feature if one parent is in the baby's room and needs to contact the other parent. You can also use this feature to 'find' a mislaid parent unit.

At the baby unit:

1. Press and hold the **'Page'** key for 2 seconds and then release. The parent unit will emit a tone.
2. Press the **'Page'** key again to turn off the alert tone.

At the parent unit:

When the page tone sounds you can silence it by pressing and holding any key on the parent unit.

## Night-light

The baby unit has a one touch night-light which has a soft starry glow, providing comfort and reassurance for your baby and allowing you to see your baby in a darkened room.

Press the **'Light'** key on the front of the baby unit. A soft light will gently turn on. Press the **'Light'** key again and the light will fade off.





## Simple solutions

If you are experiencing problems with your baby monitor, there are some quick and easy checks you can do.

### The parent and baby units will not power on

- Please check that you have correctly installed the batteries in the parent unit and that the mains power for the baby unit and parent unit charging pod is connected and switched on.

### The 'Link' light on the parent unit is flashing, the noise indication LEDs are not functioning and you cannot hear sounds from your baby's room

- You may have moved out of range of the baby unit. Move the parent unit closer and wait 5 seconds for the link to re-establish.
- You may need to manually re-establish the link. Turn both units off and then press and release the **'On/Off'** key on both the baby and parent units. After a few seconds the green 'Link' light will come on.

### You can't hear your baby on the parent unit and the 'Link' light is still glowing steadily

- Check that the volume on the parent unit is turned up.

### The baby monitor is making a high pitched ear-piercing noise

- This can happen if the baby and parent unit are too close to each other. Move the parent unit further apart from the baby unit.
- Clean the charging contacts with a soft, dry cloth.

If you are experiencing any difficulty after making the above checks, please call the helpdesk for further assistance.

### Helpdesk

The helpdesk is open from 8.30am to 5.00pm, Monday to Friday (excluding Bank Holidays) and can be contacted on 0845 833 1673 (local rate call charge applies).





# General information

## Changing the parent unit batteries

The parent unit is supplied with 2 x AAA 1.2V 800mAh Nickel Metal Hydride Rechargeable Batteries.

To change the batteries please refer to page 5 of this guide.

- Only use recommended batteries or those of an equivalent type.
- Batteries are to be inserted with the correct polarity. Follow the diagram in the battery compartment.
- DO NOT short circuit the supply terminals.
- Promptly remove exhausted batteries from the parent and baby units and replace if the operating times have become reduced over time.
- Remove the batteries from the parent and baby units if they will not be used for an extended period of time.
- DO NOT attempt to recharge non-rechargeable batteries.
- Dispose of dead batteries properly.
- DO NOT mix old and new batteries or batteries of different types (i.e., alkaline/standard).
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in a fire, as they may explode or leak.
- DO NOT attempt to open the battery outer casing.
- Batteries are harmful if swallowed, so keep away from young children.



## Product guarantee

This product has a warranty of 12 months and is therefore guaranteed to be free from defects in materials and workmanship during that period. If you experience a problem within that time, simply call the Magicbox Helpdesk on 0845 833 1673 (local rate call charge applies).

If your problem cannot be solved by the Helpdesk, you will need to return your product to the place it was purchased. Remember to take your receipt as proof of purchase as it must be produced before the warranty can be honoured. This product must have been used only for the intended purpose and not been subjected to wilful or accidental damage.

This warranty does not cover damage caused by excessive voltage or lightning.

If this product has been tampered with in any way, the warranty shall be considered null and void.

This guarantee does not affect your statutory rights.

## WEEE Directive

WEEE Directive – Directive 2002/96/EC of the European Parliament and Council of 27th January 2003 on waste electrical and electronic equipment.


At the end of the product's lifecycle, you should not throw this product into the normal household waste but take it to a collection point for the recycling of electrical and electronic equipment. The 'WEEE' symbol below, on the product, user manual and packaging indicate this.



Please contact your local authority if you need more information about the collection points in your area.

For more information telephone Envirowise on 0800 585794.





MAGICBOX™

Helpline  
**0845 833 1673**

(local call rate)



Sold by Magicbox (2007) Ltd. Taylors Piece, 9-11 Stortford Road, Great Dunmow. CM6 1DA.  
Magicbox is a trademark of Euro Suisse International Ltd.

LEAPFROG and the LeapFrog logo are trademarks or registered trademarks of LeapFrog Enterprises, Inc.,  
used under license. © 2008 LeapFrog Enterprises, Inc. All rights reserved.

Aug 08/Issue: 1  
[leapfroguk.com/](http://leapfroguk.com/)

